



INSTALLATION - on completed floor



The area **under the tub** must also be **completely tiled!**
However, the walls must not be tiled.

Do not tile tub **before installation!**


INSTALLATION - on raw concrete (casing dimensions)

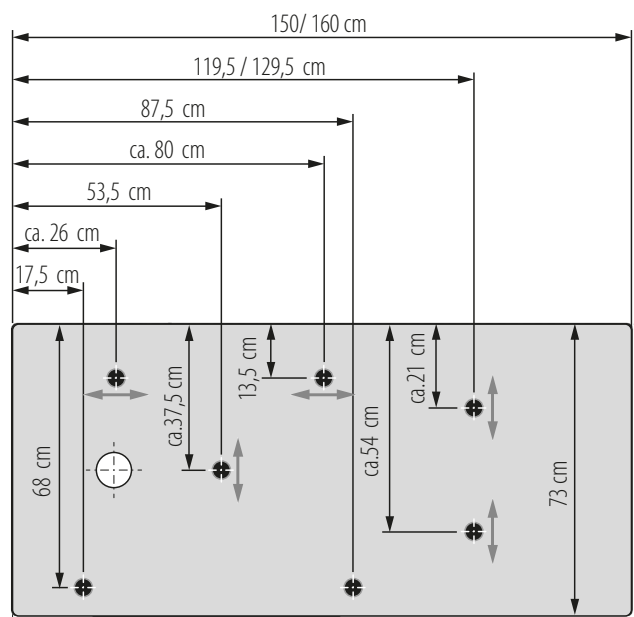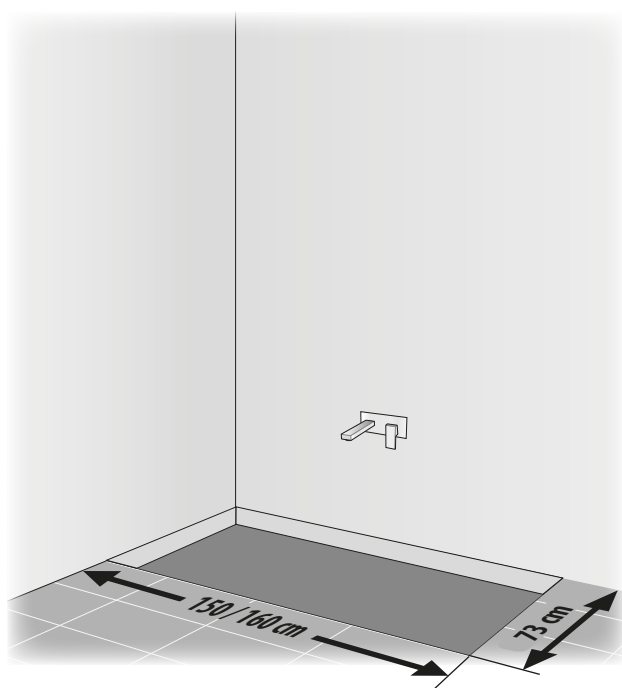

IMPORTANT! The dimensions of the casing must be observed exactly! The tub can be set **exactly 14 cm lower!**

PRE-INSTALLATION - INFORMATION

Tub dimensions

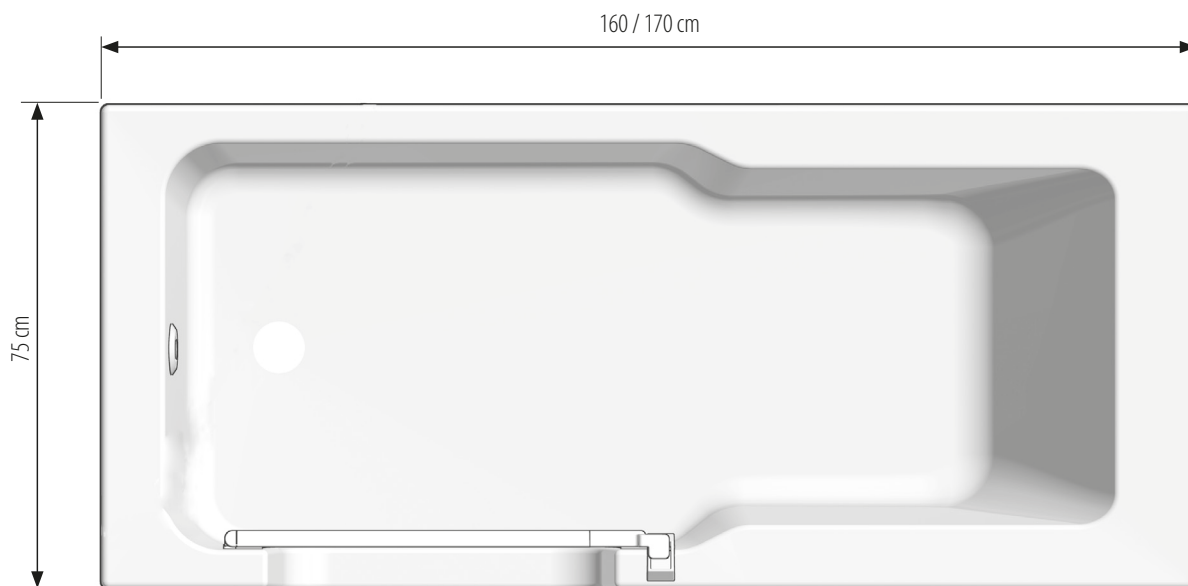

ODOUR-TRAP - installation area

Total shower height	55 cm
Room height required	--
Entry height	19,5 cm
Drain	Ø 50 mm

